


Router Jig Swivel Base




General layout of the Jig. The jig base is clamped or screwed to the base board on the bed of the lathe. One side of centre will give you concave the other side convex.

The threaded rod is for fine depth of cut adjustment. Some experimentation is needed to get the correct cutter path.

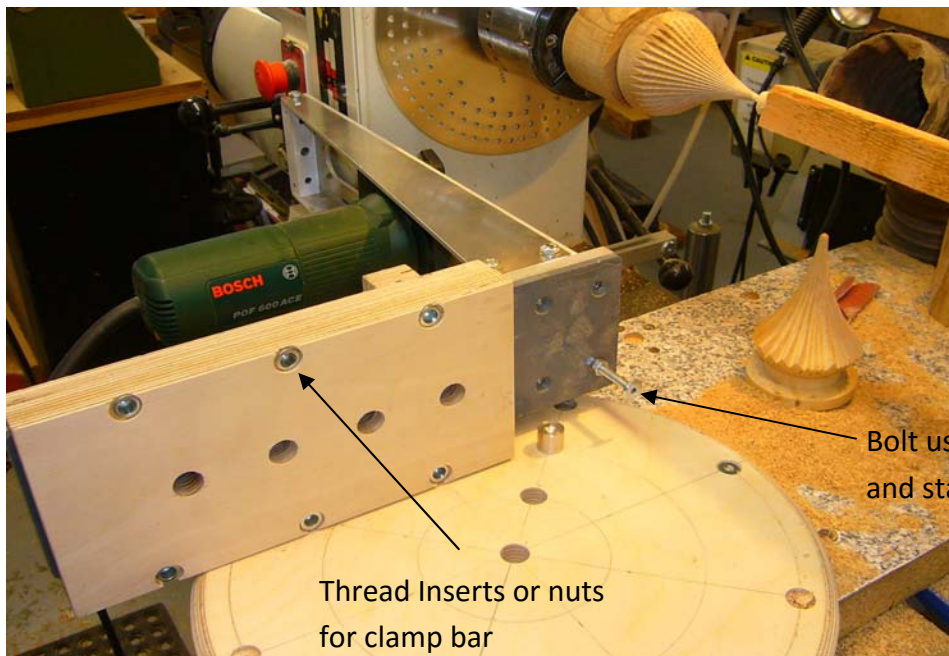


Thread Inserts or nuts
for clamp bar

Bolt used to give extra support
and stability

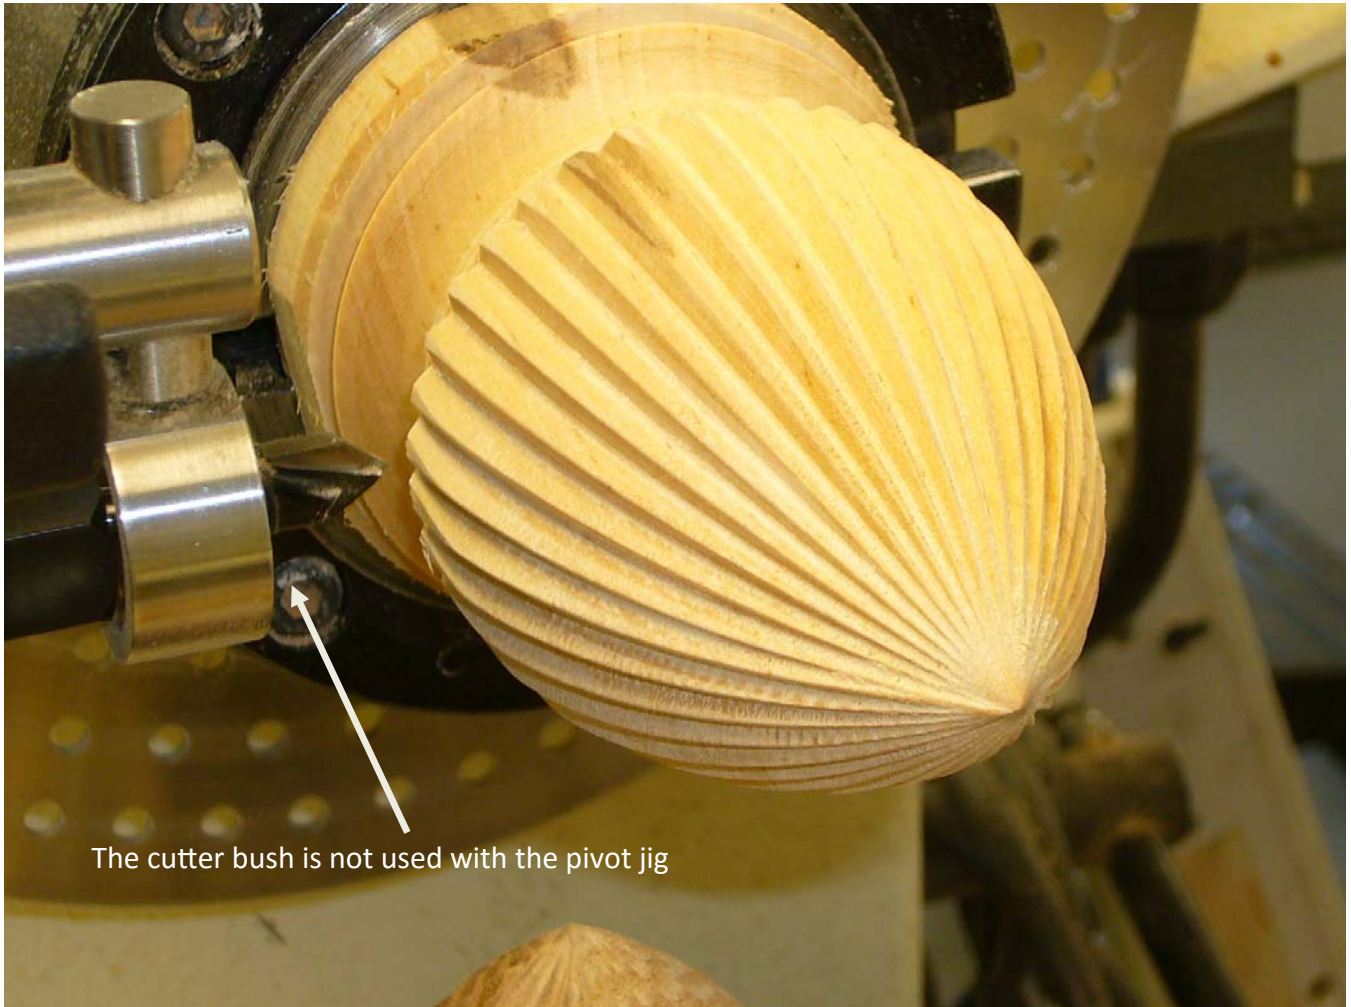

The cutter bush is not used with the pivot jig

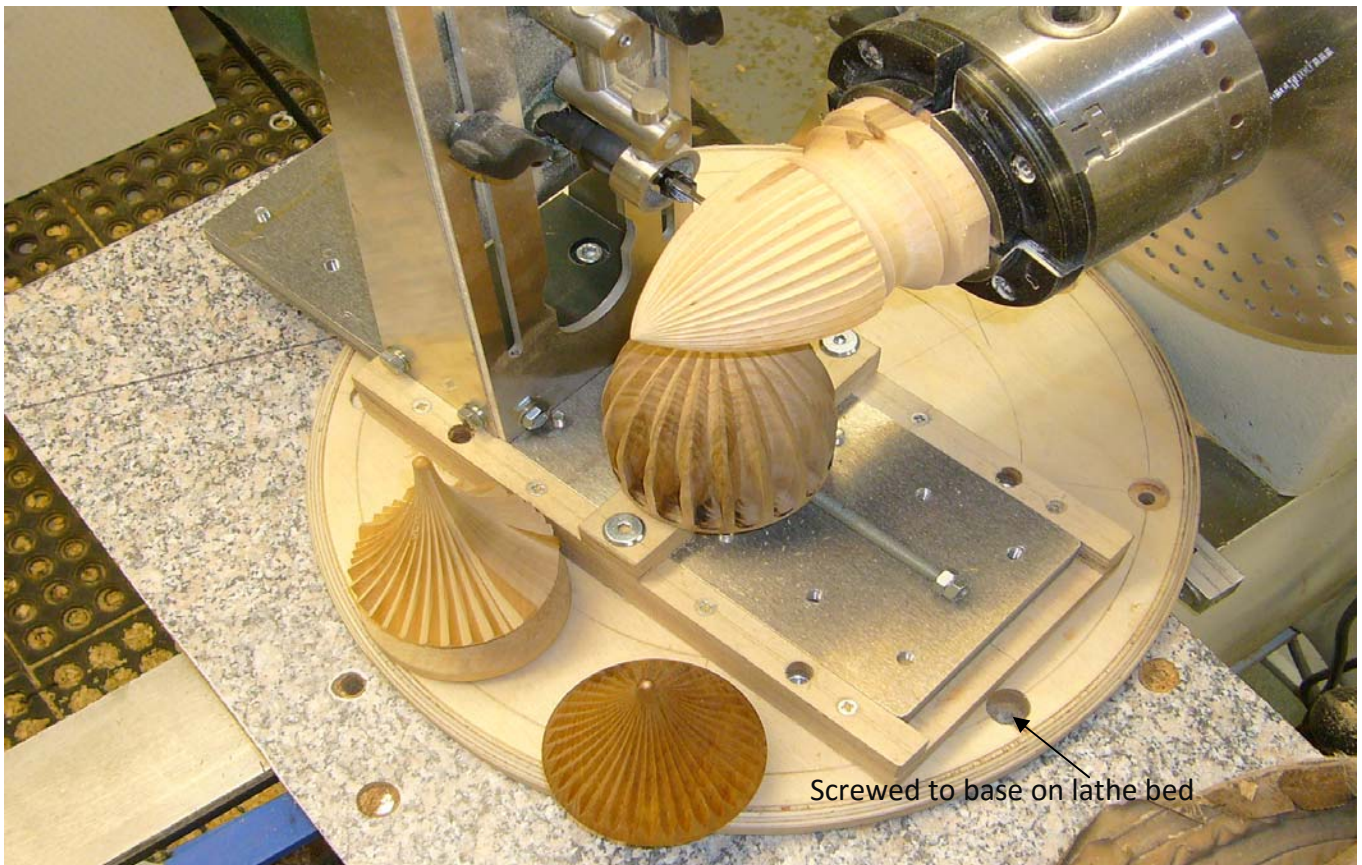

Screwed to base on lathe bed